

MODEL: **50301COP**
ASSEMBLY INSTRUCTIONS
READ AND SAVE THESE INSTRUCTIONS

READ INSTRUCTIONS ALL THE WAY THROUGH PRIOR TO ASSEMBLY.

THIS FOUNTAIN SHOULD TAKE APPROXIMATELY 30 MINUTES TO ASSEMBLE.

MAKE SURE ALL PARTS ARE FIRMLY TIGHTENED.


UNPACK THE FOUNTAIN

YOU SHOULD HAVE RECEIVED THE FOLLOWING PARTS IN THE PACKAGE: ROOF, LIGHT ASSEMBLY, UPPER FRAME, (2) LOWER TUBES, (3) SLATE PANELS, (2) LARGE SCREWS, (2) SHORT FLAT SCREWS, (4) LONG FLAT SCREWS, (2) SMALL SCREWS, (2) WASHERS, (2) LARGE NUTS, (8) NUTS, PLATE, RESERVOIR, (2) EXTRA HALOGEN BULBS, A BAG OF DECORATIVE STONES, TRANSFORMER AND SUBMERSIBLE PUMP. TO PROTECT THE FINISH, PLACE ALL PARTS ON A SOFT SURFACE.

TOOLS NEEDED: YOU WILL NEED THE FOLLOWING TOOLS OR EQUIPMENT: SCREWDRIVER, ADJUSTABLE WRENCH.

FOUNTAIN ASSEMBLY

1. SCREW LOWER TUBES TO UPPER FRAME.
2. INSERT LOWER TUBES THROUGH THE PLATE THEN SECURE WITH (2) WASHERS AND (2) LARGE NUTS AS SHOWN.
3. ATTACH THE PUMP TO THE RUBBER HOSE. MAKE SURE THE PUMP WATER VALVE IS IN MAX./(+) POSITION.
4. PLACE THE FOUNTAIN BODY ON RESERVOIR.
5. ATTACH TOP SLATE PANEL (SLATE PANEL A) TO THE BRACKETS, ALIGN HOLES AND FASTEN WITH (2) SHORT FLAT SCREWS AND (2) NUTS AS SHOWN, CONTINUE ATTACHING SLATE PANELS IN ORDER AS MARKED (B, C), SECURE WITH (4) LONG FLAT SCREWS AND (4) NUTS AS SHOWN.
6. ATTACH (2) BULBS TO BULB CLIPS IN ROOF AND SECURE THE LIGHT POWER CORD WITH THE CORD CLIPS. (PLEASE RETAIN THE OTHER TWO SUBMERSIBLE HALOGEN BULBS FOR FUTURE BULB REPLACEMENT.)
7. ALIGNING HOLES IN ROOF WITH HOLES IN TOP OF UPPER FRAME AS SHOWN, THEN SECURE WITH THE LARGE SCREWS AND NUTS.
8. USE A WATER BOTTLE TO FILL RESERVOIR WITH 0.45 GALLONS OF WATER TO COMPLETELY SUBMERSE THE PUMP.
NOTE: DISTILLED WATER IS RECOMMENDED TO REDUCE MINERAL DEPOSITS AND BACTERIA BUILD-UP.
9. PRESS THE COPPER SHEET TO AGAINST TOP OF THE SLATE (A), TEST WATER RUNNING, ADJUST THE WATER VALVE ON PUMP IF NEEDED.
NOTE: HOLD THE TOP PORTION OF THE FOUNTAIN WHEN TESTING WATER.
10. SECURE PLATE WITH FOUNTAIN BODY TO RESERVOIR WITH (2) SMALL SCREWS.
11. PLACE DECORATIVE STONES ON PLATE.
12. JOIN THE PUMP CONNECTORS AND LIGHT CONNECTORS TOGETHER.
13. PLUG THE TRANSFORMER INTO SOCKET AND TURN ON AT SWITCH, YOUR FOUNTAIN IS READY FOR USE.

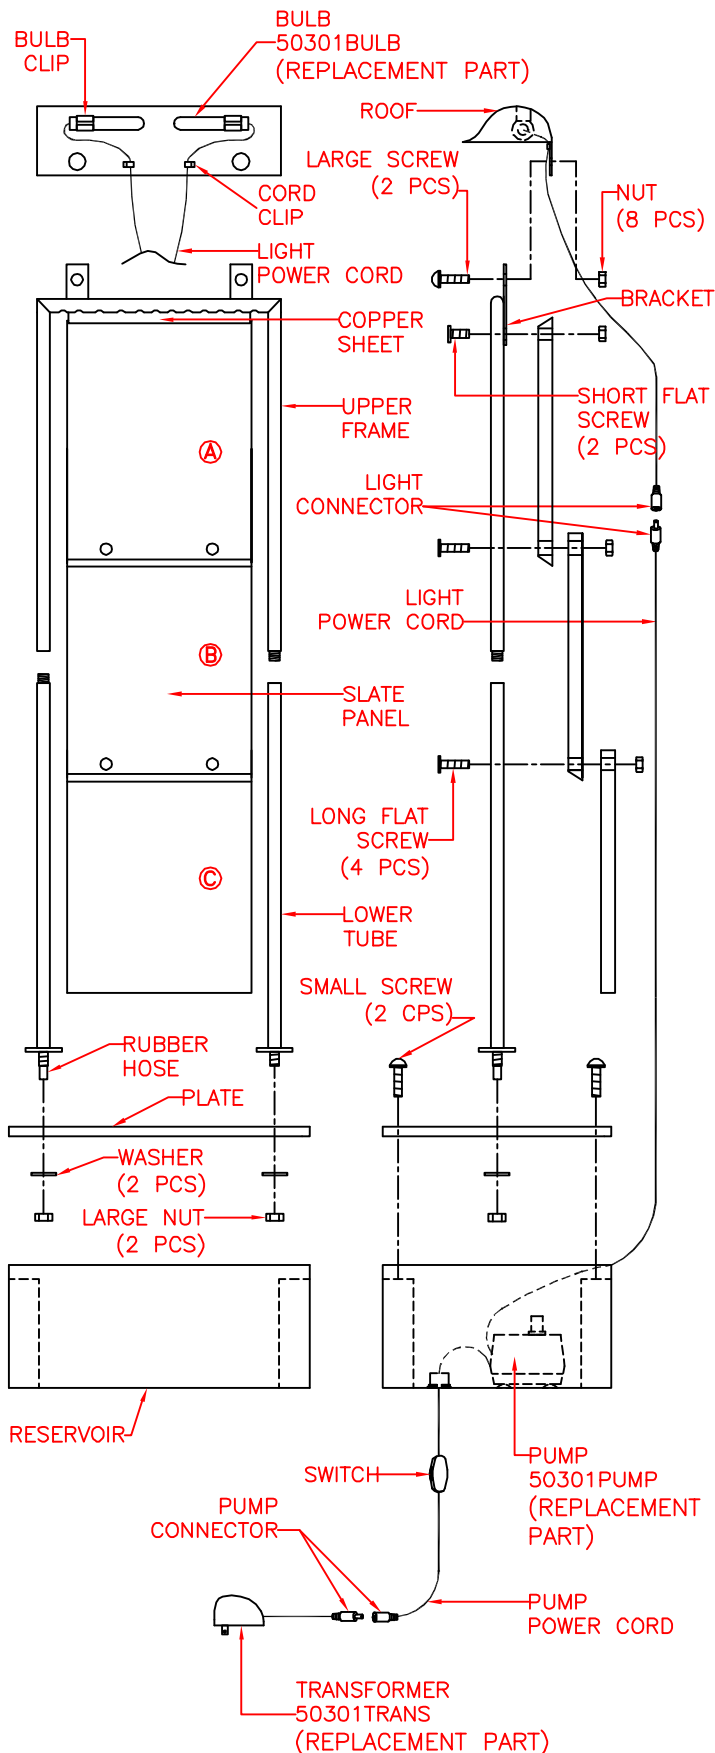

AVAILABLE PARTS ARE:
 50301TRANS (TRANSFORMER)
 50301PUMP (PUMP)
 50301BULB (BULB)

TROUBLE SHOOTING:

1. IF YOUR FOUNTAIN DOES NOT WORK, CHECK PLUG AT THE SOCKET. MAKE SURE THE PLUG IS FULLY AND PROPERLY INSERTED INTO THE WALL OUTLET.

2. NEXT CHECK TO MAKE SURE THE OUTLET IS POWERED.

3. IF THE FOUNTAIN STILL DOES NOT WORK, PLEASE CONTACT YOUR DISTRIBUTOR OR PLACE OF PURCHASE.

SPLASHING DISCLAIMER:

SPLASHING MAY OCCUR WHEN FOUNTAIN IS INITIALLY TURNED ON. PROTECT SURROUNDING SURFACES AS NEEDED.

IMPORTANT PUMP INFORMATION:

PUMP MUST BE FULLY SUBMERSED IN WATER WHILE OPERATING. PLEASE SEE NEXT PAGE FOR PUMP REPLACEMENT.

WATER: TO REDUCE MINERAL DEPOSITS AND BACTERIA BUILD UP THE USE OF DISTILLED WATER IS RECOMMENDED.


WARNING:

* THIS FOUNTAIN IS RATED FOR INDOOR USE ONLY.

** ONCE A WEEK INSPECT FOUNTAIN, FLOOR AND ADJACENT WALL FOR MOISTURE BUILD-UP AND CLEAN AS NECESSARY. THIS IS ESPECIALLY IMPORTANT FOR HUMID ENVIRONMENTS.

*** MADE FROM GENUINE RAW COPPER, THIS FOUNTAIN WILL NATURALLY AGE OVER TIME TO CREATE A UNIQUE LOOK AND FEEL.

**** THIS UNIT MUST BE CONNECTED TO A SUPPLY CIRCUIT THAT IS PROTECTED BY A GROUND FAULT CIRCUIT INTERRUPTER (GFCI). THE GFCI SHOULD BE TESTED ON A ROUTINE BASIS. TO TEST THE GFCI, PUSH THE TEST BUTTON. THE GFCI SHOULD INTERRUPT POWER. PUSH THE RESET BUTTON. POWER SHOULD BE RESTORED. IF THE GFCI FAILS TO OPERATE IN THIS MANNER, THE GFCI IS DEFECTIVE.

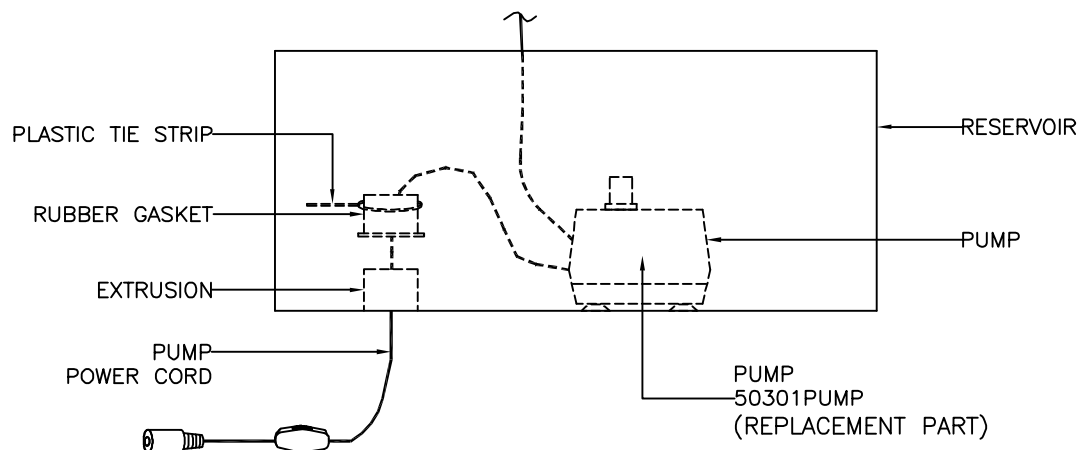**PUMP REPLACEMENT:**

1. UNPLUG THE FOUNTAIN.
2. DISASSEMBLE THE FOUNTAIN AS NECESSARY TO EXPOSE RESERVOIR.
3. REMOVE ALL WATER FROM RESERVOIR.
4. SNIP THE PLASTIC TIE STRIP.
5. PEEL BACK RUBBER GASKET FROM EXTRUSION.
6. PULL OLD PUMP FROM FOUNTAIN.
7. THREAD CORD FOR NEW PUMP THROUGH EXTRUSION AS SHOWN.
8. PLACE RUBBER GASKET OVER EXTRUSION AND SECURE BY TIGHTENING A NEW PLASTIC TIE STRIP (INCLUDED).
9. REASSEMBLE THE FOUNTAIN WITH NEW PUMP.